



Load v Span Chart - Modulift Spreader Beam Standard Range

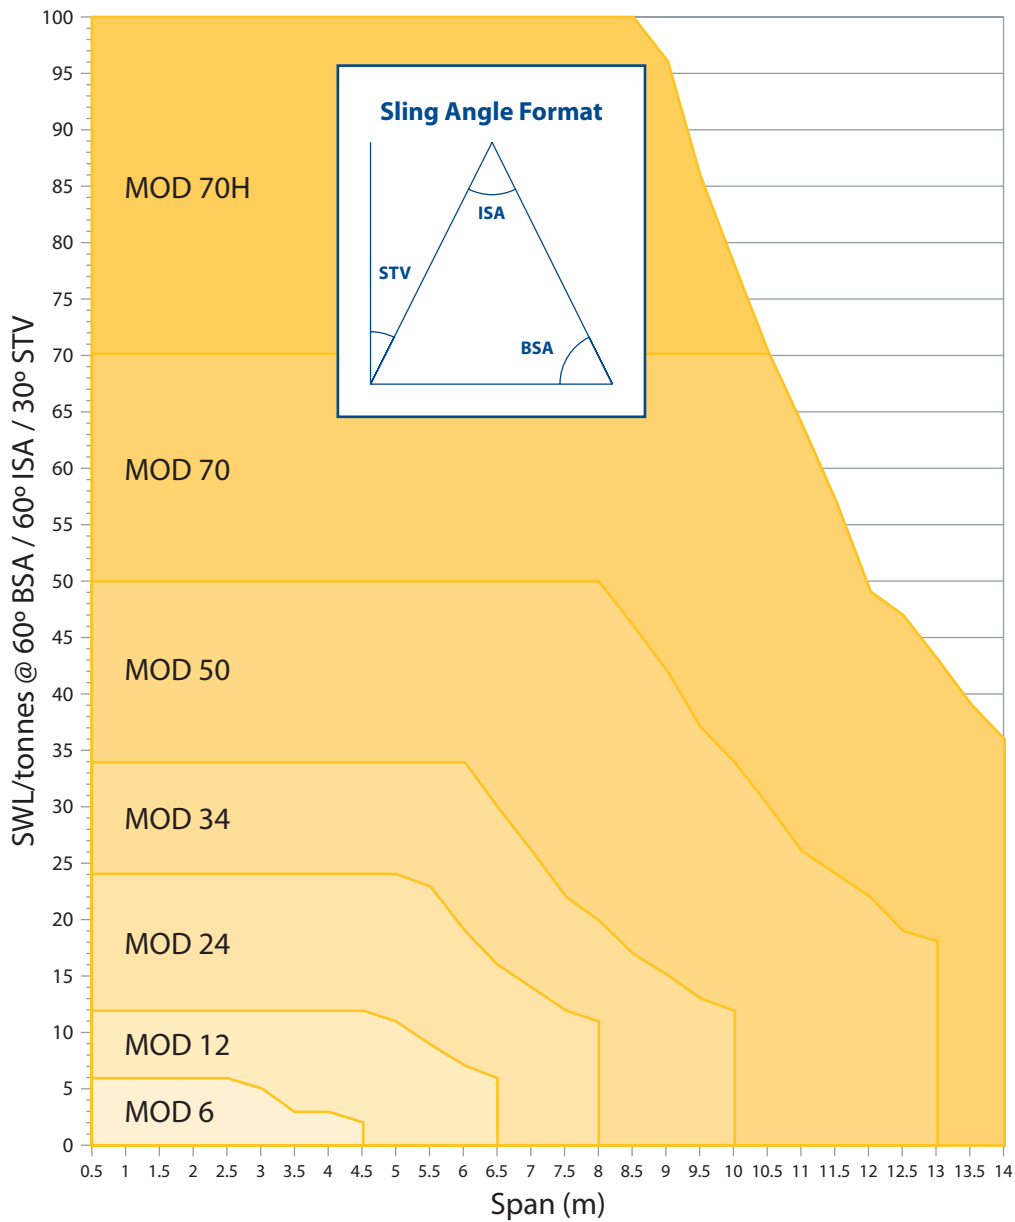

Load v Span Chart - Modulift Spreader Beam Heavy Range

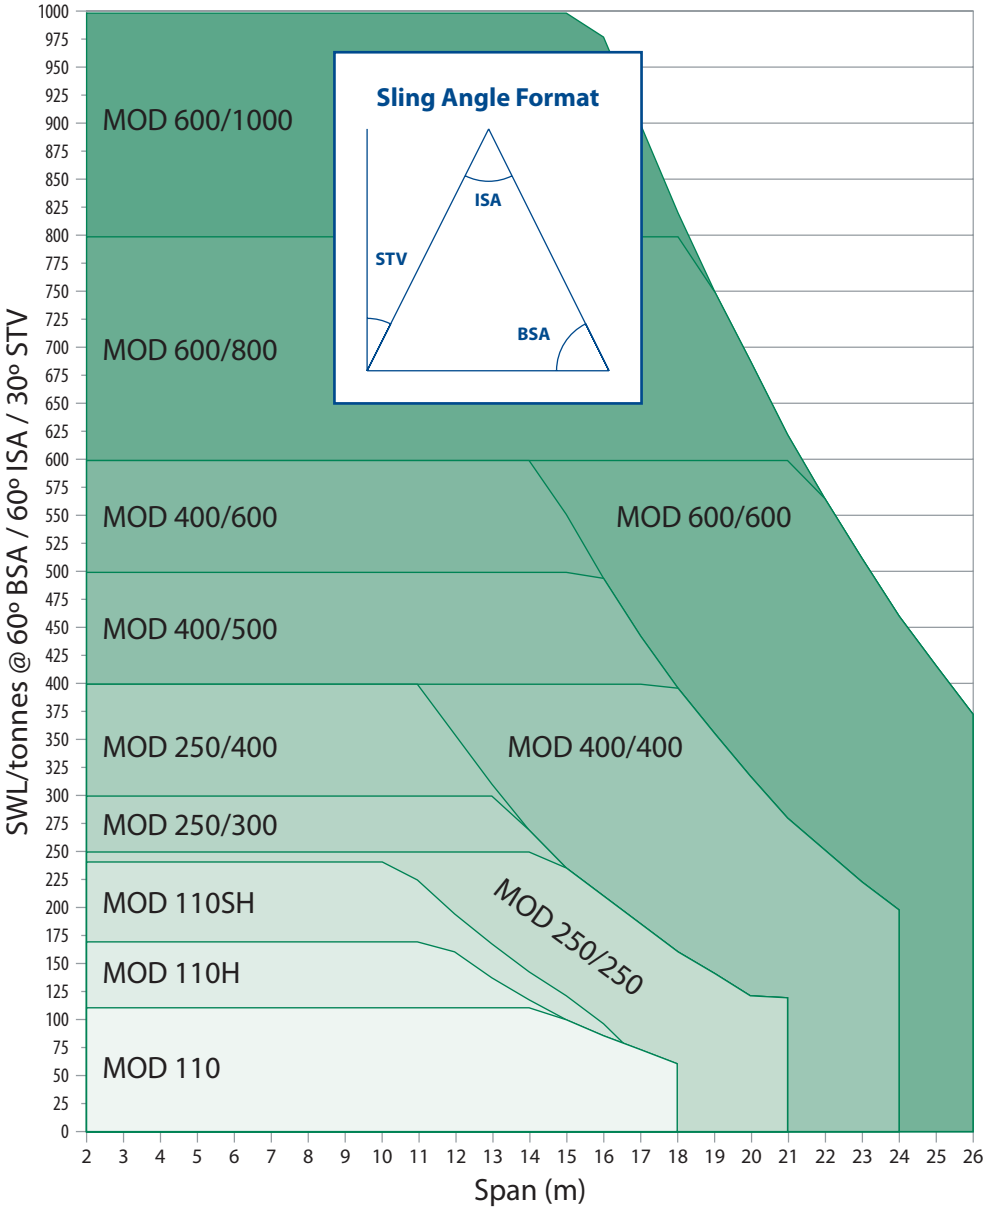

Lifting Points/Load Connection Points 6–24m Span

● = connection point
for cross bar, and/or
connection point for
sling to weld eye.
LC = Lattice Connections
CB = Cross Beams

