

1074.1 - 1 MAN CAGE



The 1074 1 Man Cage is built primarily with safety in mind, the cage conforms fully to BSEN 14502 and PM28. This cage has solid walled sides to half height and close mesh to the rear to prevent accidental injury but maintain visibility. The cage also benefits from internal overhead harness points.

The 1074 has been designed to meet increasing requirements for access to areas where a standard man cage is unable to reach. The design incorporates the four lifting points as well as the fork pockets to enable the unit to be truly universal in any situation.

Capacity	Width	Length	Height	SWL
1 Man	725mm	725mm	2185mm	150Kg

Eichinger Equipment Ltd
69-73 James Road, Frimley, Camberley, GU15 2RH
T: 01276 605 970 F: 01276 682 913 E: sales@eichinger.co.uk

The following instructions must be read and understood by each intended user of this equipment; if there is anything you do not understand contact Eichinger Equipment Ltd.

Ensure the equipment is adequate for the job you need to carry out.

You must not operate this equipment if you are under the influence of alcohol, drugs or if you are feeling unwell.

A risk assessment should be carried out prior to moving or using this equipment.

The following PPE (Personal protective equipment) should be worn when using this equipment:

Gloves / Goggles / Hard Hat / Steel Toecap boots / Hi-Vis Vest

We also suggest suitable clothing should be worn.

Familiarise yourself with the equipment, its use and how it works!

As this equipment is used at multi-level, ensure the intended area for use is clear of overhead cables and power lines or similar hazards which may affect its safe use. This equipment must always be used in conjunction with your site safety policies.

The work area must be clear of obstructions with adequate space for the operative to work safely around the equipment.

Check and ensure the equipment is inspected and in a safe condition prior to its use. Also ensure that its load is stable and secure.

Crane Use:

Ensure the chain sling being used to lift the unit is of the correct rating and is fully certified.

Intended personnel should only attempt to enter the unit when it is fully grounded and have been given the "all-clear" from the crane operator or banks man.

Release the gate catch and enter the unit through the inward swinging door.

Once the intended user is in the unit close the door ensuring that the door catch has engaged. Attach the lanyard to the overhead anchor point.

Always ensure that the load being lifted (including personnel) does not exceed the maximum capacity of the unit.

Also check that the load being lifted is secure and even.

We advise that communication between the hoist operator and the user of the equipment is efficient at all times either via radio or where necessary a third person as a guide.

IMPORTANT

Eichinger Equipment Ltd suggest as good practice that chain slings intended for the lifting of personnel remain on the unit to reduce the possibility of the chain sling being "miss-used".

WARNING

To avoid the risk of injury keep hands and feet clear of the unit at all times during use.

Only use safety handles to manoeuvre the unit during use and only when it is safe to do so. At no time should anyone either trained personnel or otherwise be allowed under the raised load or near enough to be at risk in the event that the load moves.

